



Tiolo favola  
**CYLINDER BLOCK**  
N. Rif. Codice Ricambio


Descrizione

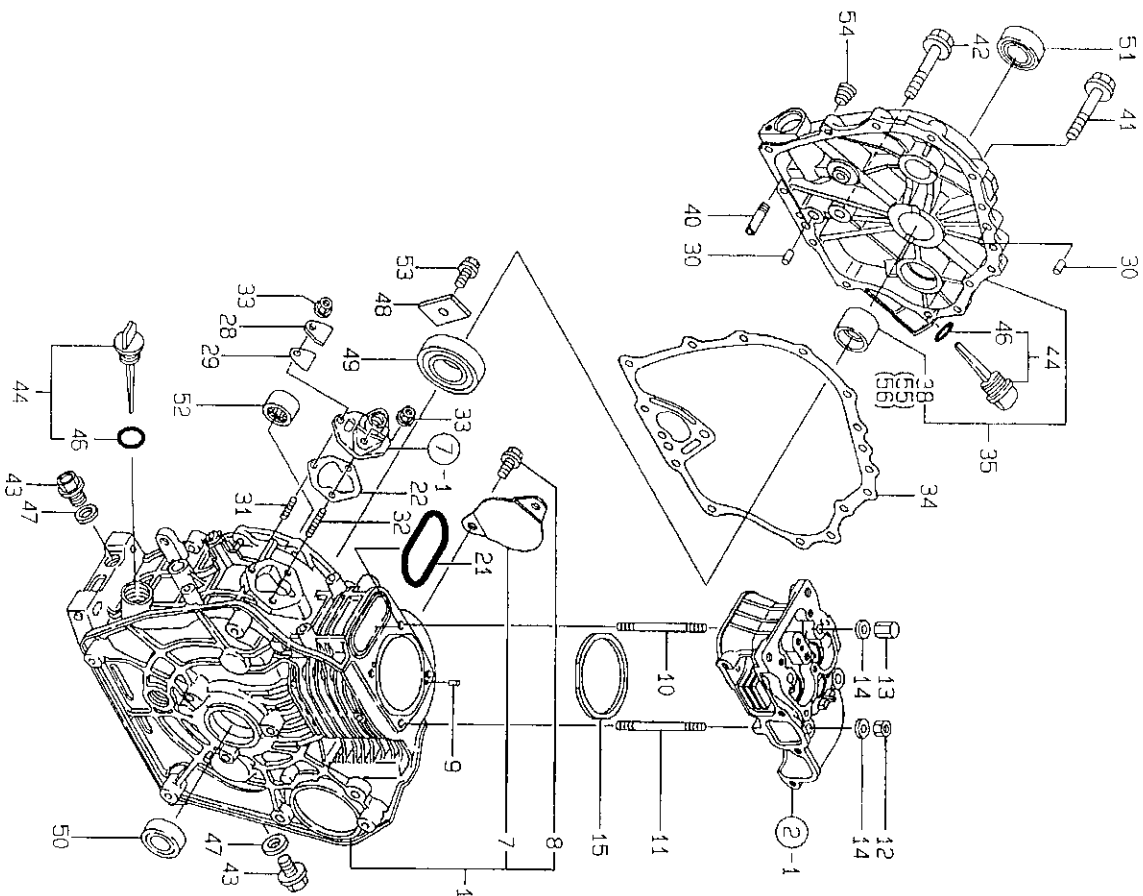

1	714771-01560	Block Assy, Cylinder
7	114350-01700	• Cover, Starter
8	26106-100122	• Bolt M10x 12 Plated
9	22312-040080	Pin 4x8, Straight
10	114250-01200	Stud, Cyl. Head
11	114250-01210	Stud, Cyl. Head
12	114250-01221	Nut 8
13	114250-01251	Cap Nut 8
14	124950-01250	Washer
15	114771-01330	Gasket, Cyl. Head Cmp
21	114250-01380	O-ring
22	114250-01800	Shim Set
28	114250-01830	Cover, Inspec. window
29	114250-01841	Gasket
30	114270-01600	Parallel Pin 8x12
31	26226-060182	Stud M 6x 18 Plated
32	26226-060222	Stud M 6x 22 Plated
33	26366-060002	Nut M6
34	114250-01412	Gasket, Crank Case
35	114280-01455	Cover (d), Crank Case
38	114250-02100	• Bearing, Main
40	114250-35150	Pipe, L.o. Inlet
41	26106-060252	Bolt M 6x 25 Plated
42	26106-080352	Bolt M 8x 35 Plated
43	105425-01690	Plug M16
44	114299-01760	Cap. W/Hub oil Gauge
46	114299-01950	• O-ring
47	22190-160002	Seal Washer 16s
48	114299-02030	Retainer
49	114250-02113	Ball Bearing
50	160110-02220	Seal, Oil
51	160210-02220	Seal, Oil
52	24162-152112	Needle Bearing
53	26106-080122	Bolt M 8x 12 Plated
54	23876-010000	Plug Pt1/8, Screw
55	114250-02200	Main Bearing Us=0.25
56	114250-02210	Main Bearing Us=0.50

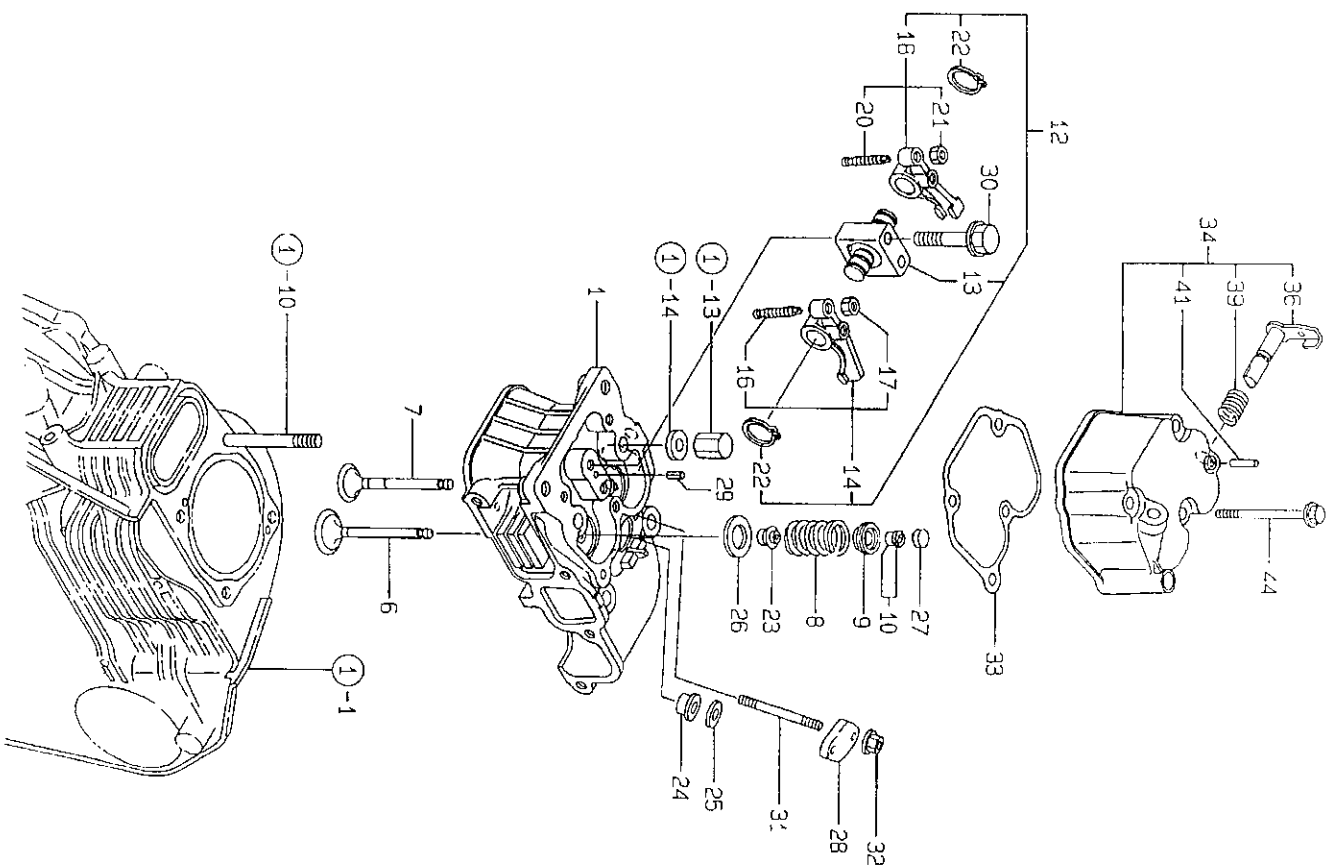


N. Rif.	Codice Ricambio	Descrizione
1	114771-11020	Cylinder Head
6	114771-11100	Valve, Suction
7	114771-11110	Valve, Exhaust
8	114250-11120	Spring, Valve
9	114250-11180	Retainer, Spring
10	714250-11570	Coiler Assy
12	114771-11250	Support Cam, Arm
13	114771-11260	Support, Rocker Arm
14	114771-11650	Arm Assy, Intake
16	114250-11240	Screw, Valve Adjust.
17	26856-060002	Lock Nut 6
18	114771-11660	Arm Assy, Exhaust
20	114250-11240	Screw, Valve Adjust.
21	26856-060002	Lock Nut 6
22	22242-000120	Circlip 12
23	114250-11340	Seal, Valve Stem
24	114771-11461	Gasket, Nozzle
25	114771-11470	Spacer, Nozzle
26	114250-11600	Washer
27	119260-11370	Cap, Valve
28	114250-11901	Retainer
29	22351-040008	Spring Pin 4x 8
30	26106-060452	Bolt M 6x 4.5 Plated
31	26226-060652	Stud M6x65
32	26366-060002	Nut M 6
33	114771-11310	Gasket, Bonnet
34	114771-11950	Bonnet Assy, Head
36	114250-03591	Shaft Assy, Decomp.
39	114250-03640	Spring
41	22312-030160	Parallel Pin 3x16
44	26106-060552	Bolt M 6x 5.5 Plated

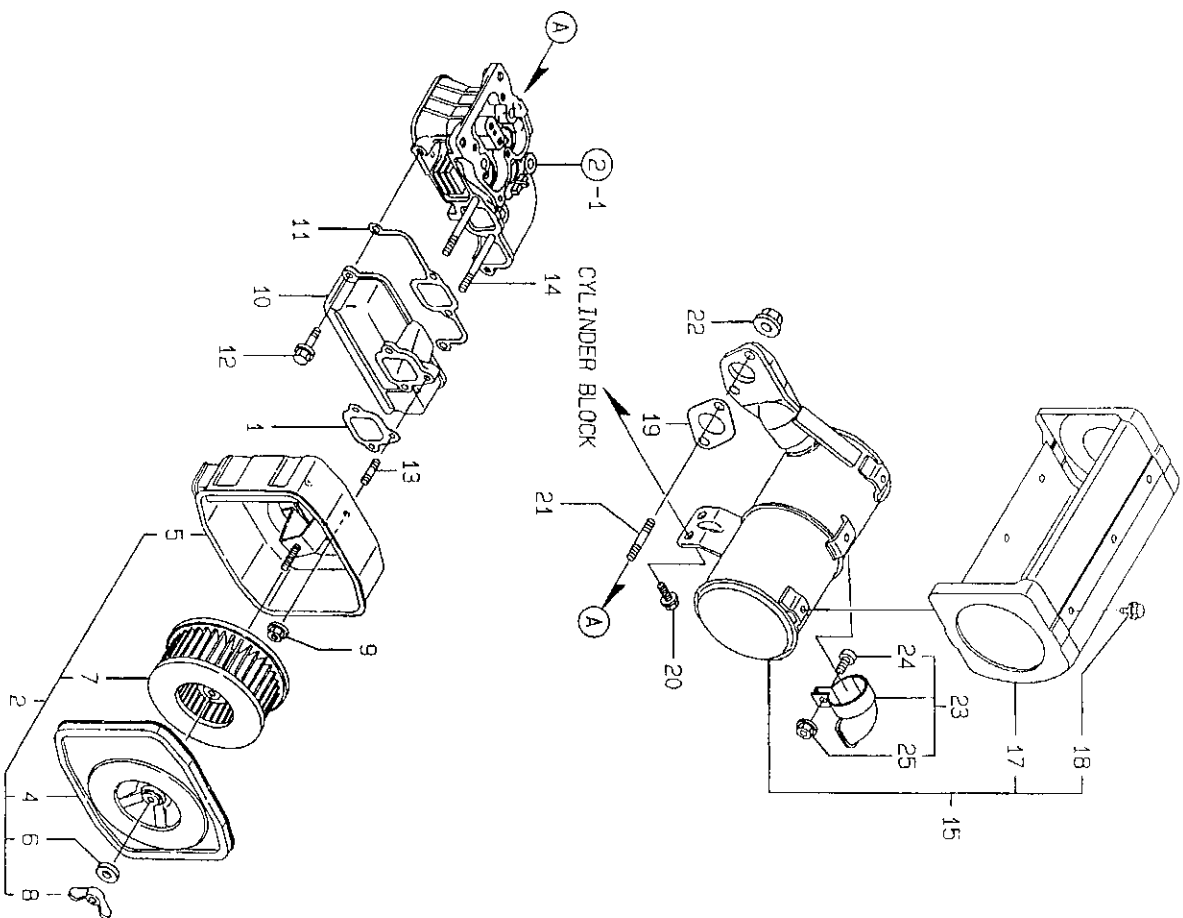


1	114250-12211
2	714250-12560
4	114250-12520
5	114250-12530
6	114250-12560
7	114250-12580
8	114250-12550
9	114250-12300
10	114771-12010
11	114771-12200
12	26106-060252
13	26226-060142
14	26226-060552
15	114250-13521
17	114250-13701
18	26106-060082
19	114250-13201
20	26106-060122
21	26216-080182
22	26366-080002
23	114286-13800
24	26554-060182
25	26367-060002

1	Gasket, Air Cleaner
2	Cleaner Assy, Air
3	Cover, Air Cleaner
4	Case, Air Cleaner
5	Washer M 6, Seal
6	Element, Wet Air
7	Wing-nut, M 6
8	U-nut
9	Manifold, Intake
10	Gasket, Air Intake
11	Bolt M 6x 25 Plated
12	Stud M 6x 14 Plated
13	Stud M6x 55 Plated
14	Muffler W/cover
15	Cover, Muffler
17	Bolt M 6x 8 Plated
18	Gasket (non-ash.)
19	Bolt M 6x 12 Plated
20	Stud M 8x 18 Plated
21	Nut M 8
22	Deflector, Exh
23	Screw M 6x 18
24	U-nut M6
25	

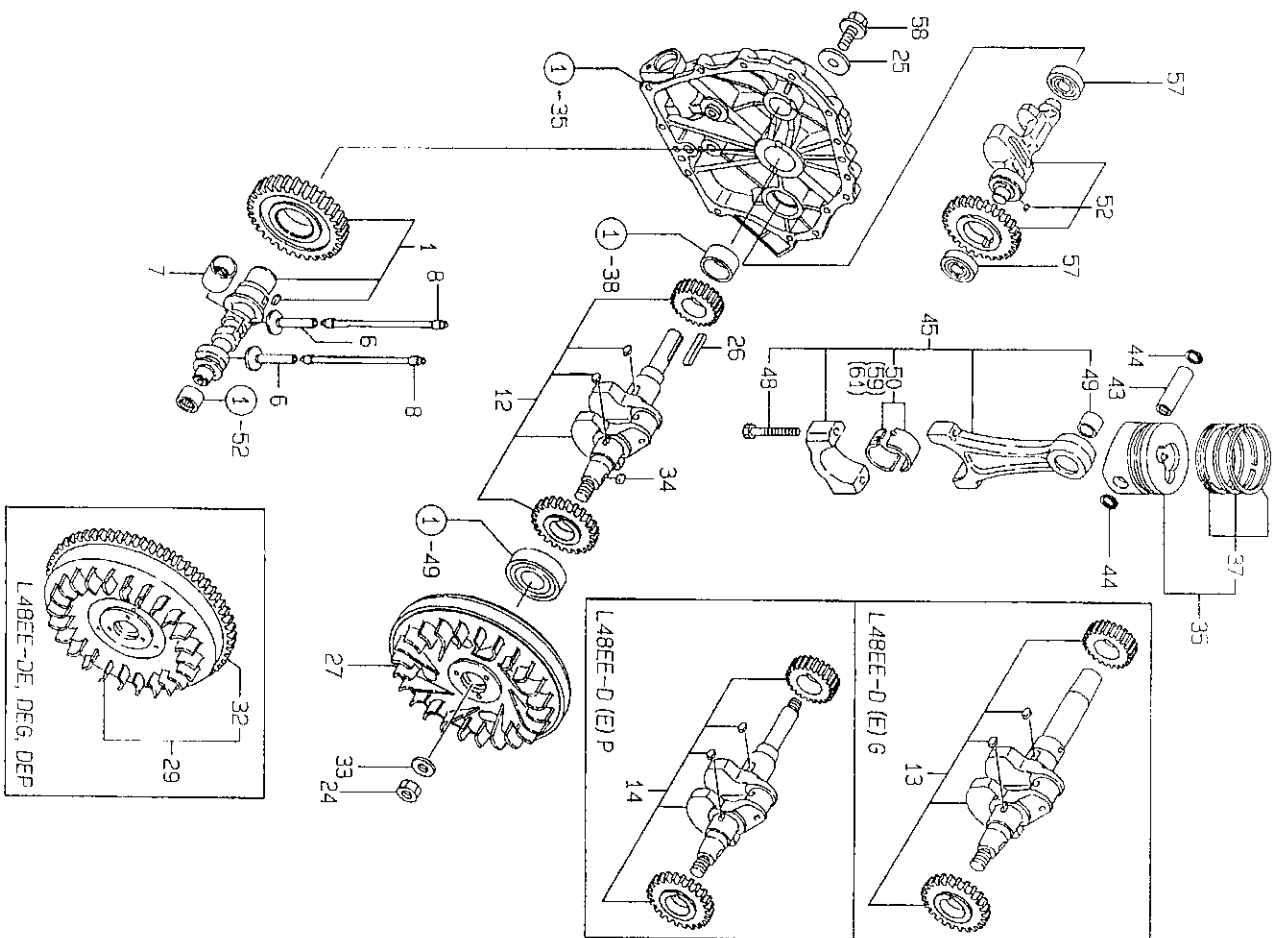


1	714471-14580	Camshaft (d) Assy
6	114250-14200	Tappet
7	114771-14280	Tappet, F.o.
8	114250-14450	Rod, Push
12	714775-21700	Crankshaft Assy.
13	714777-21700	Crankshaft Assy.
14	714776-21700	Crankshaft Assy.
24	103854-01221	Nut M16
25	160310-14550	Washer
26	160642-21150	Key 4.7x30
27	114780-21400	Flywheel (d)
29	114781-21590	Flywheel Wring Gear
32	114262-21600	• Gear, Ring
33	114250-21550	Washer, Flywheel
34	22512-040120	Key 4x 12
35	714772-22720	Piston W/rings
37	714770-22500	• Ring Set, Piston
43	114299-22300	Pin, Piston
44	22252-000190	Circlip 19
45	714770-23700	Rod Assy, Connecting
48	119265-23200	• Bolt, Rod
49	114770-23100	• Bush, Piston Pin
50	714770-23600	• Bearing, Crankpin
52	714770-28530	Shaft Assy, Balancer
57	24101-062024	Ball Bearing
58	160642-21250	Bolt 5/15-24unf
59	714770-23610	Bearing, Pin (u.s=0.25
61	714770-23620	Bearing, Pin (u.s=0.50

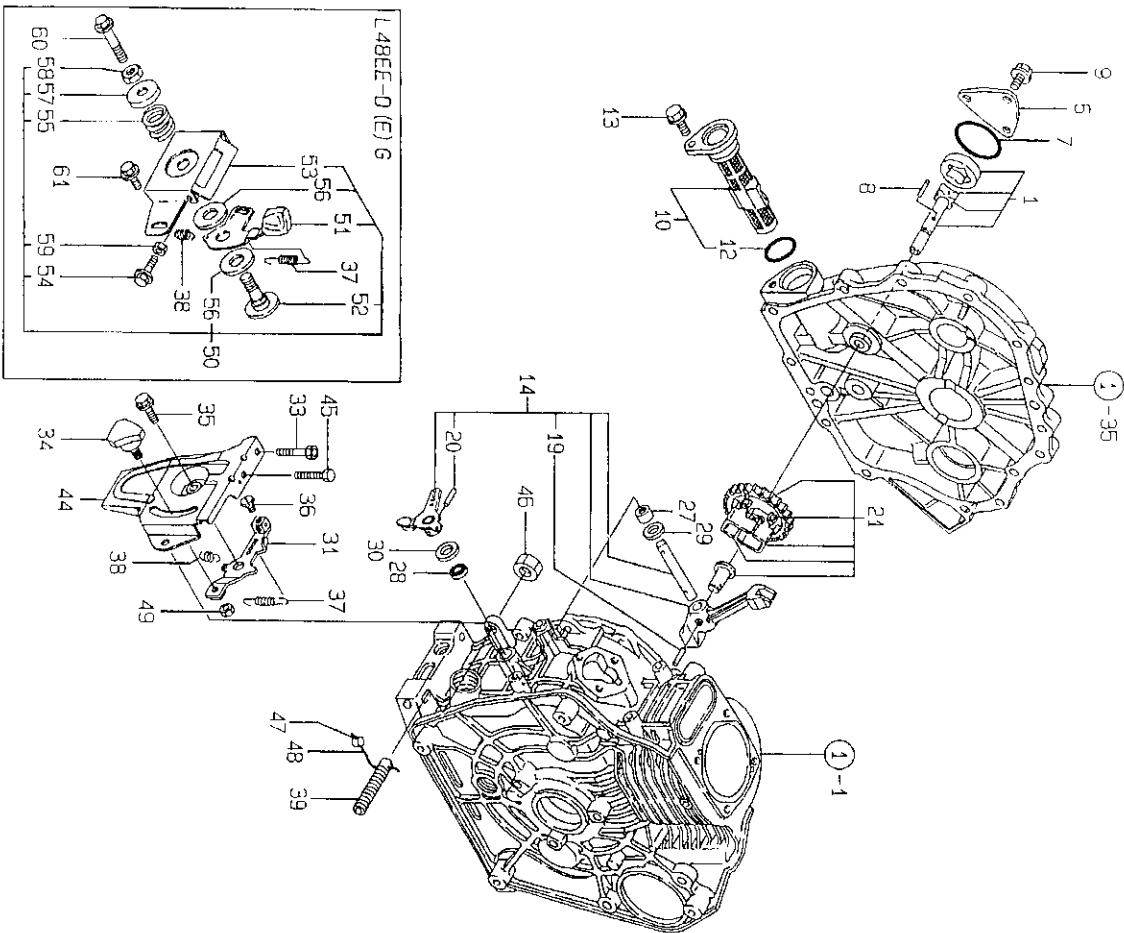


1	114250-32010
6	114250-32070
7	103338-32570
8	22312-030160
9	26476-060142
10	114250-35110
12	24341-000224
13	26106-060162
14	714250-61500
19	22322-030200
20	22322-030200
21	714770-61100
27	114770-61520
28	114770-61600
29	114770-61610
30	114770-61190
31	114250-66050
33	102100-67080
34	160725-78350
35	26106-060142
36	26117-040088
37	114770-66810
38	114250-66200
39	114771-66550
44	114299-66100
45	114250-66440
46	26696-100002
47	135210-61090
48	22451-060000
49	26347-060002
50	183250-66500
51	183250-66050
52	183250-66070
53	183250-66100
54	114250-66440
55	104200-66820
56	104200-66830
57	104200-66850
58	26696-100002
59	26757-060002
60	26106-060452
61	26476-060142

N Rif.	Descrizione
1	Pump Assy, Lub.oil
6	Cover, Oil Pump
7	O-ring
8	Parallel Pin 3x16
9	Bolt M 6x 14, Tapping
10	Strainer, Lub Oil
12	. O-ring 1a S-22 4
13	Bolt M 6x 16 Plated
14	Level Assy, Governor
19	. Taper Pin 3x20
20	. Taper Pin 3x20
21	Governor Assy
27	Bearing, Needle
28	Seal, Oil
29	Washer, Thrust
31	Washer
33	Handle, Regulator
34	Bolt, Adjusting Knob (w/m6x15)
35	Bolt M 6x 14 Plated
36	Bolt M 4x 8 Plated
37	Spring, Regulator
38	Spring, Return
39	Torque Spring Assy
44	Stay, Handle
45	Bolt, Adjusting
46	Nut M10
47	Lead
48	Wire 0.6
49	U Nut 6
50	Stay Assy, Handle
51	. Handle, Regulator
52	. Shaft, Handle
53	. Bracket, Regulator
54	. Bolt, Adjusting
55	. Spring
56	. Plate, Friction
57	. Washer (b)
58	. Nut M10
59	. Nut 6
60	Bolt M 6x 45 Plated
61	Bolt M 6x 14, Tapping

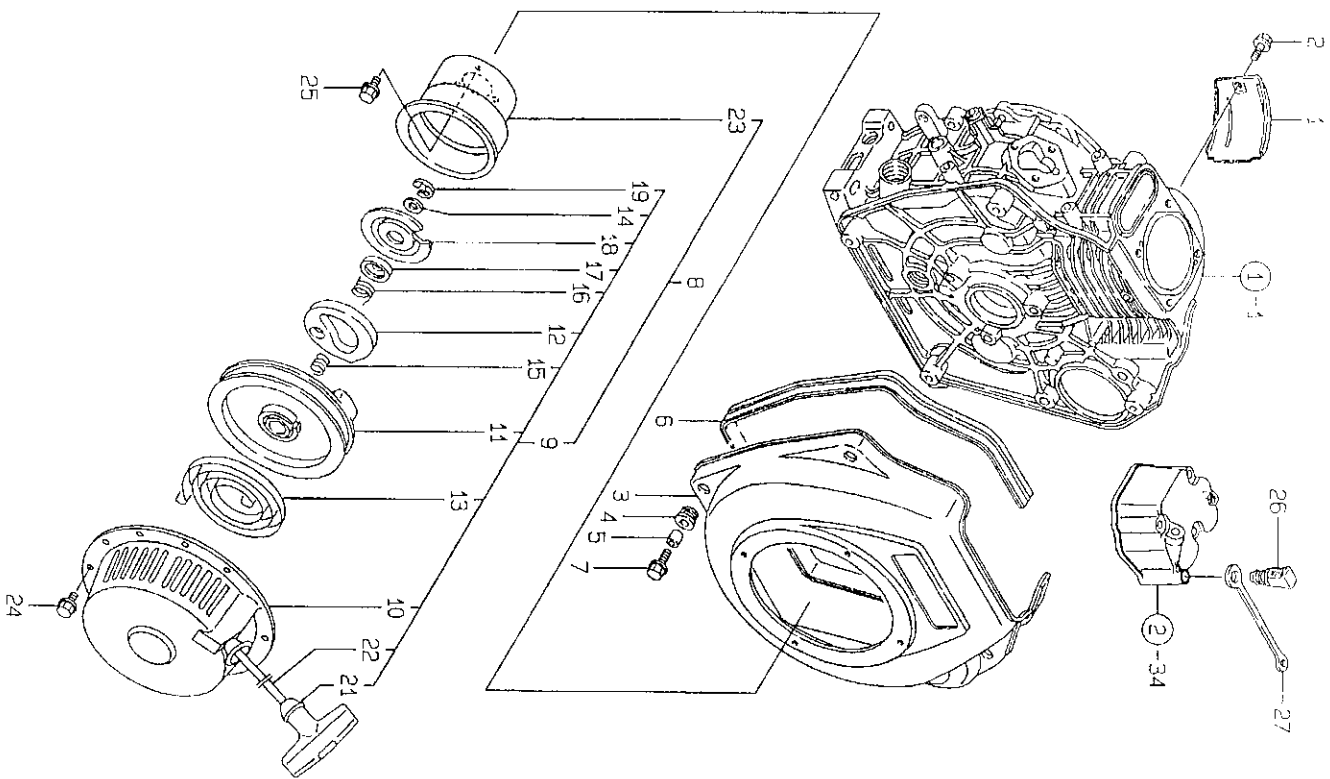


1	114299-45210
2	26106-060122
3	114771-45100
4	114250-45301
5	114250-45310
6	114250-45330
7	114370-45351
8	114260-76050
9	114260-76250
10	114260-76520
11	160260-76520
12	160260-76530
13	160260-76540
14	160260-76550
15	160260-76560
16	160290-76570
17	160260-76580
18	160260-76590
19	160260-76800
21	160260-76620
22	160260-76630
23	114250-76590
24	26106-060082
25	26106-060122
26	114250-76600
27	114250-76610


N. Rif.	Descrizione
1	Cover, Cylinder
2	Bolt M 6x 12 Plated
3	Case, Cooling Fan
4	Rubber, Cushion
5	Collar
6	Seal, Fan Case
7	Bolt, Fan Case
8	Recoil Starter (d) Asy
9	Case (d) W/No Label
10	Reel, Recoil
11	.. Ratchet
12	.. Spring, Thrust
13	.. Washer, Thrust
14	.. Spring, Friction
15	.. Spring, Return
16	.. Cover, Spring
17	.. Plate, Friction
18	.. Circclip (e)
19	.. Knob, Starter
21	.. Rope, Starter
22	.. Pulley, Starter
23	Bolt M 6x 8 Plated
24	Bolt M 6x 12 Plated
25	Plunger
26	Holder, Plunger
27	Plunger

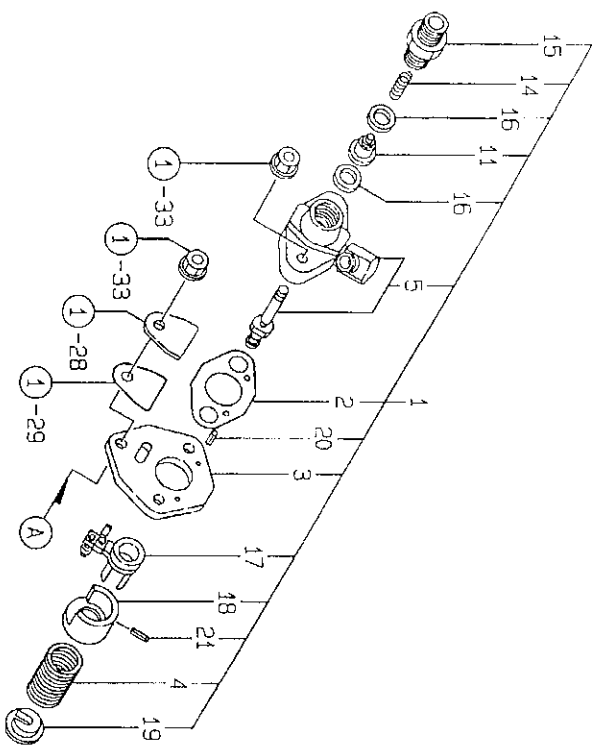

1	714350-51200
2	105546-51020
3	114250-51080
4	114250-51160
5	114350-51200
11	114250-51300
14	105546-51330
15	114250-51340
16	124550-51350
17	114250-51600
18	114250-51640
19	114250-51650
20	22351-020006
21	22351-030008
22	714771-53100
23	114771-53000
24	119593-53080
25	114250-53120
26	119593-53130
27	114775-53140
28	114775-53210
29	114775-53100
32	114775-53330
33	114250-53400
45	114771-59801

N. Rif.	Descrizione
1	Pump Assy, F,Inject.
2	Gasket
3	Plate
4	Spring
5	Body, F.I, Pump
11	Valve Assy, Delivery
14	Spring, Deliv. Valve
15	Holder, F.I.p deliv
16	Gasket, Delivery
17	Lever Assy, Control
18	Seat (a), Spring
19	Seat (b), Spring
20	Spring Pin 2x 6
21	Spring Pin 3x 8
22	Valve Assy, F,Inject
23	Nozzle Assy
24	Nut, Nozzle Case
25	Spring, Nozzle
26	Retainer, Spring
27	Spacer, Valve Stop
28	Pin
29	Holder Assy
32	Pin
33	Shim Pack
45	Pipe, Fuel Injection

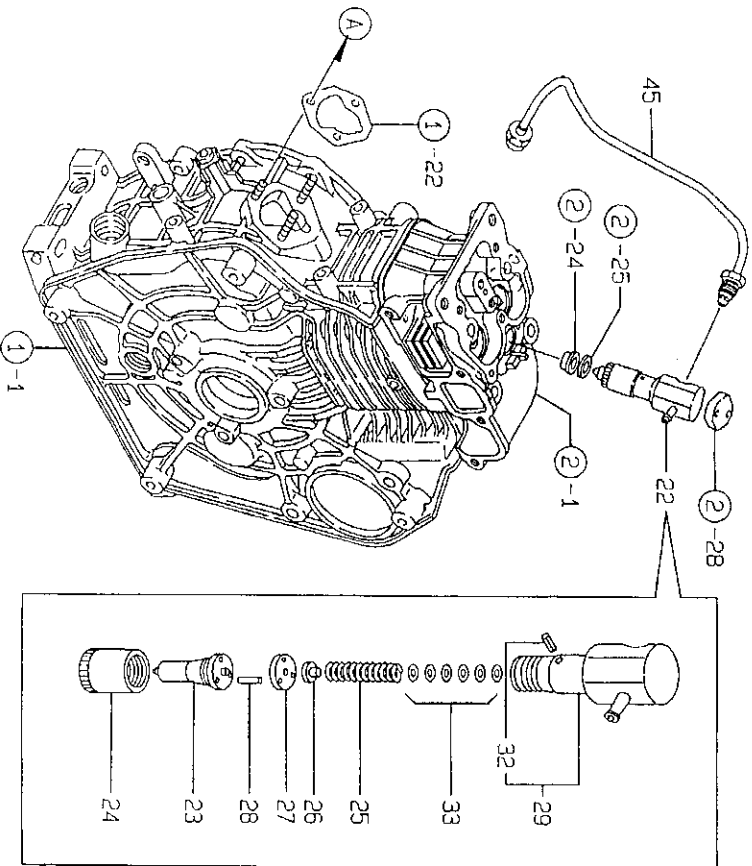


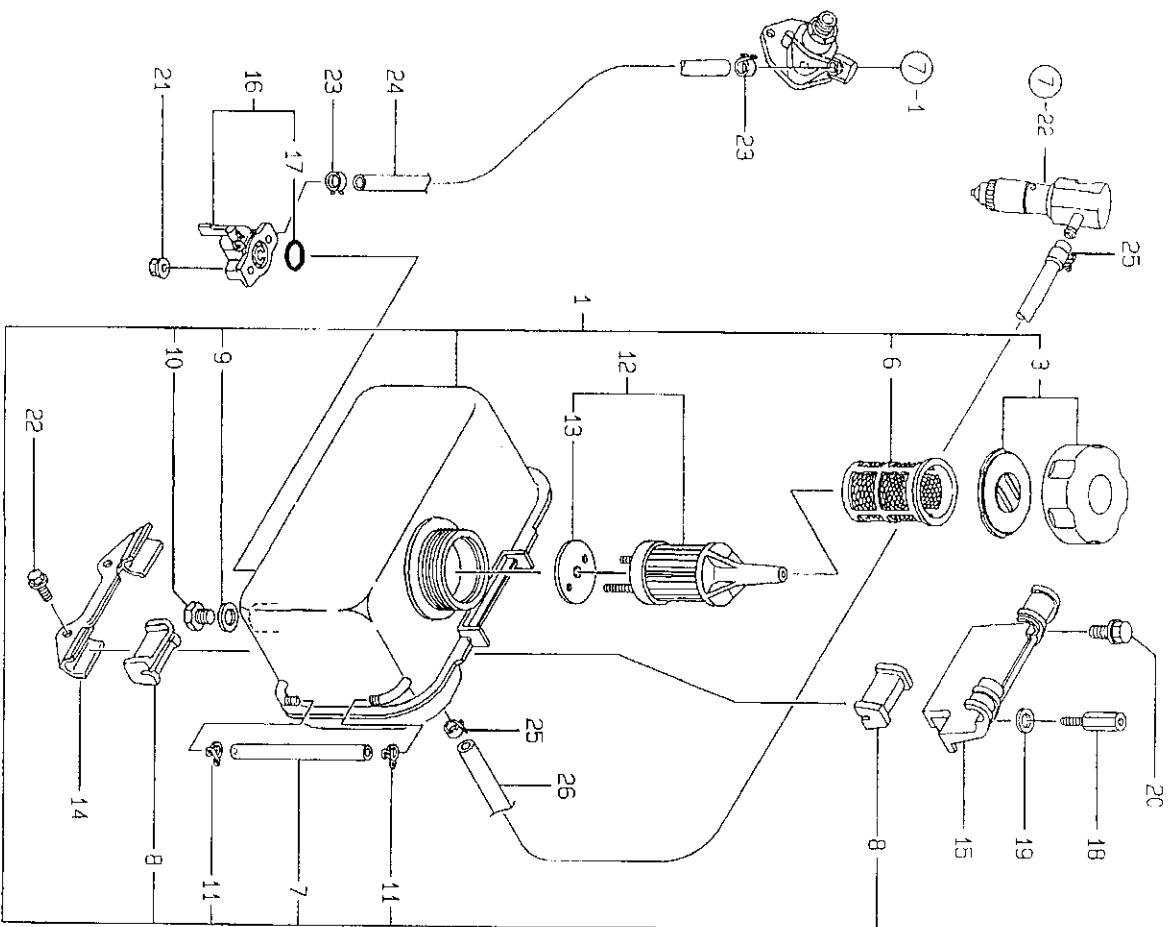

1	714250-55701
3	114288-55040
6	114250-55100
7	114250-55150
8	114250-55201
9	23414-080000
10	105300-55080
11	103854-55220
12	114250-55121
13	114250-55130
14	114299-55210
15	114299-55230
16	114250-55300
17	24341-000150
18	114650-55810
19	22117-080000
20	26106-080452
21	26366-060002
22	26476-060142
23	106990-44860
24	114250-59051
25	124722-59050
26	114250-59060


Descrizione
Tank Fuel (red) (50)
• Cap Assy, Tank
• Filter, Fuel
• Pipe, Gauge
• Damper, Fuel Tank
• Gasket 8, Round
• Plug, Drain
• Clamp
• Filter, Fuel Oil
• Gasket
Stay (b)
Cock Assy, Fuel
• O-ring 1a S-15.0
Bolt, Lifting
Washer 8
Bolt M 8x 45 Plated
Nut M 6
Bolt M 6x 14, Tapping
Clip, Hose
Pipe, Fuel Oil
Clamp 9
Pipe, Fuel Return



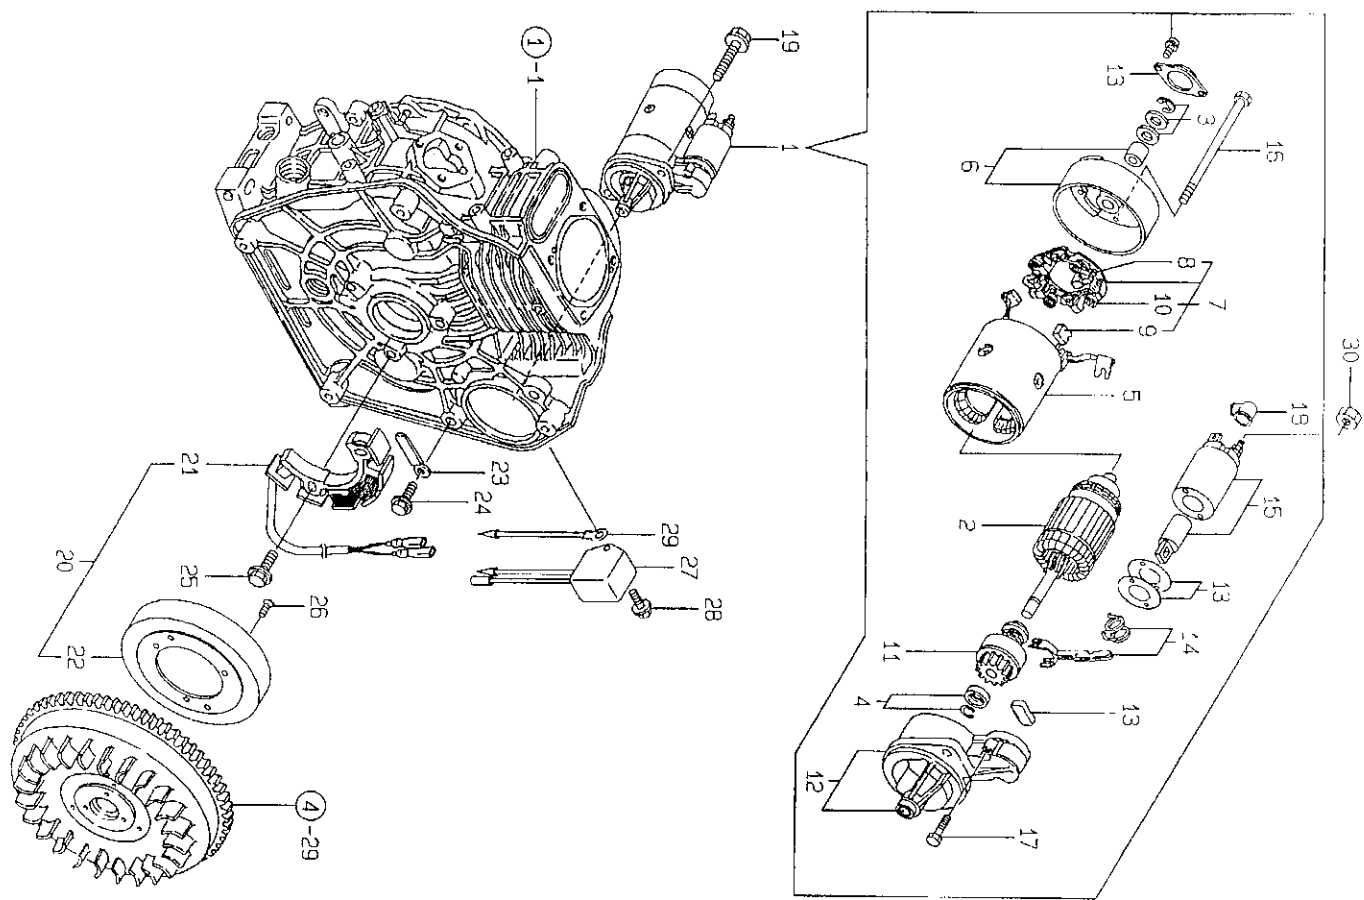

1	114362-77011
2	114381-77110
3	X2114811000
4	X2114715500
5	114381-77130
6	114381-77140
7	114371-77160
8	114371-79040
9	114371-79050
10	114371-79060
11	X2114455080
12	114381-77150
13	114371-77170
14	X2114550130
15	X2114275010
16	X2114680050
17	114371-79070
18	X2114274200
19	26106-100302
20	114351-78251
21	114351-78751
22	114351-78761
23	160710-78710
24	26106-060122
25	26476-060202
26	26577-060142
27	160970-77350
28	26106-060122
29	183350-77400
30	26716-080002


N. Rif.	Coacice Ricambio	Descrizione
1	114362-77011	Starter (s114-414a)
2	114381-77110	• Armature
3	X2114811000	• Washer Kit, Thrust
4	X2114715500	• Stopper Sel. Pinion
5	114381-77130	• Coil Assy, Field
6	114381-77140	• Cover, Rear
7	114371-77160	• Holder Assy, Brush
8	114371-79040	• Brush (-)
9	114371-79050	• Brush (+)
10	114371-79060	• Spring, Brush
11	X2114455080	• Pinion Assy
12	114381-77150	• Housing Assy, Gear
13	114371-77170	• Cover Kit, Dust
14	X2114550130	• Lever Kit, Shift
15	X2114275010	• Switch Assy, Magnet
16	X2114680050	• Bolt, Through
17	114371-79070	• Bolt M 6x 37
18	X2114274200	• Cover, Terminal
19	26106-100302	Bolt M10x 30 Plated
20	114351-78251	Dynamo Assy
21	114351-78751	• Stator Assy
22	114351-78761	• Wheel, Dynamo
23	160710-78710	Clamp, Cord
24	26106-060122	Bolt M 6x 12 Plated
25	26476-060202	Bolt M 6x 20, Tapping
26	26577-060142	Screw M 6x 14
27	160970-77350	Rectifier
28	26106-060122	Bolt M 6x 12 Plated
29	183350-77400	Wire, Lead
30	26716-080002	Nut M 8

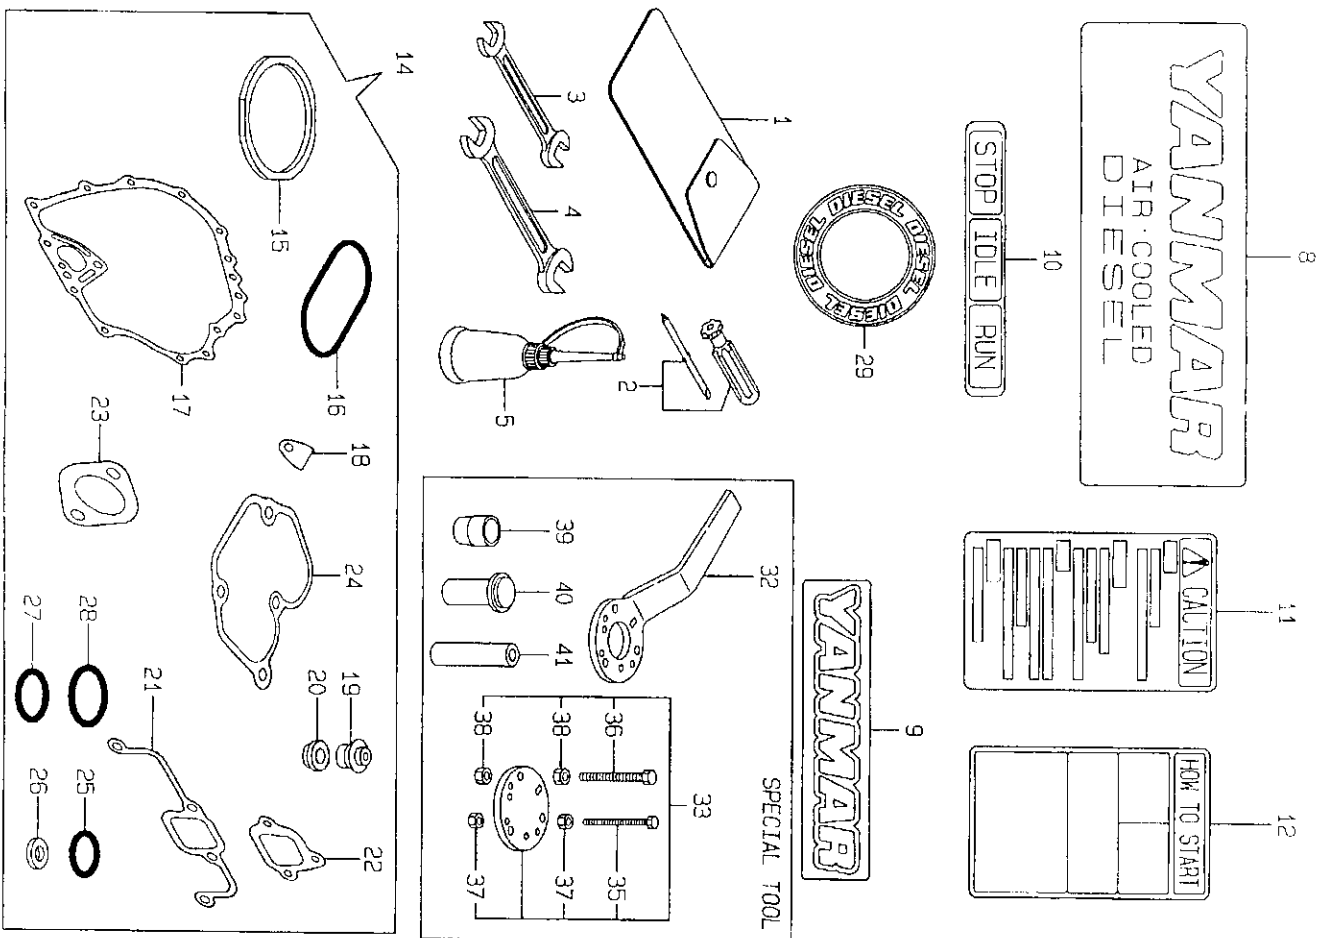

1	114250-92600
2	160330-92730
3	28110-100120
4	28110-140170
5	28210-000150
8	114250-07090
9	114250-07111
10	183250-07230
11	114268-07240
12	114268-07350
14	714771-92600
15	114771-01330
16	114250-01380
17	114250-01412
18	114250-01841
19	114250-11340
20	114771-11461
21	114771-12200
22	114250-12211
23	114250-13201
24	114771-11310
25	114299-01950
26	22190-160002
27	24341-000224
28	103338-32570
29	114261-07350
32	114250-92101
33	114250-92130
35	26116-060454
36	26116-080454
37	26716-060002
38	26716-080002
39	114250-92301
40	114250-92311
41	114250-92350

Descrizione
Bag, Tool
Screwdriver (+)
Wrench 10X12
Wrench 14X17
Feeder, Oil
Label, Air Cooled
Label, Yanmar
Label, Operation
Label, Caution
Label, How To Start
Gasket Set
• Gasket, Cyl. Head Cmp
• O-ring
• Gasket, Crank Case
• Gasket
• Seal, Valve Stem
• Gasket, Nozzle
• Gasket, Air Intake
• Gasket, Air Cleaner
• Gasket (non-asp.)
• Gasket, Bonnet
• O-ring
• Seal Washer 16s
• O-ring 1a S.22.4
• O-ring
Label
F.w. Locking Handle
Remover, Flywheel
• Bolt M 6x 45 Plated
• Bolt M 8x 45 Plated
• Nut 6
• Nut M 8
Guide, Oil Seal
Installing Tool
Installing Tool

# Elettrovalvola alla pompa

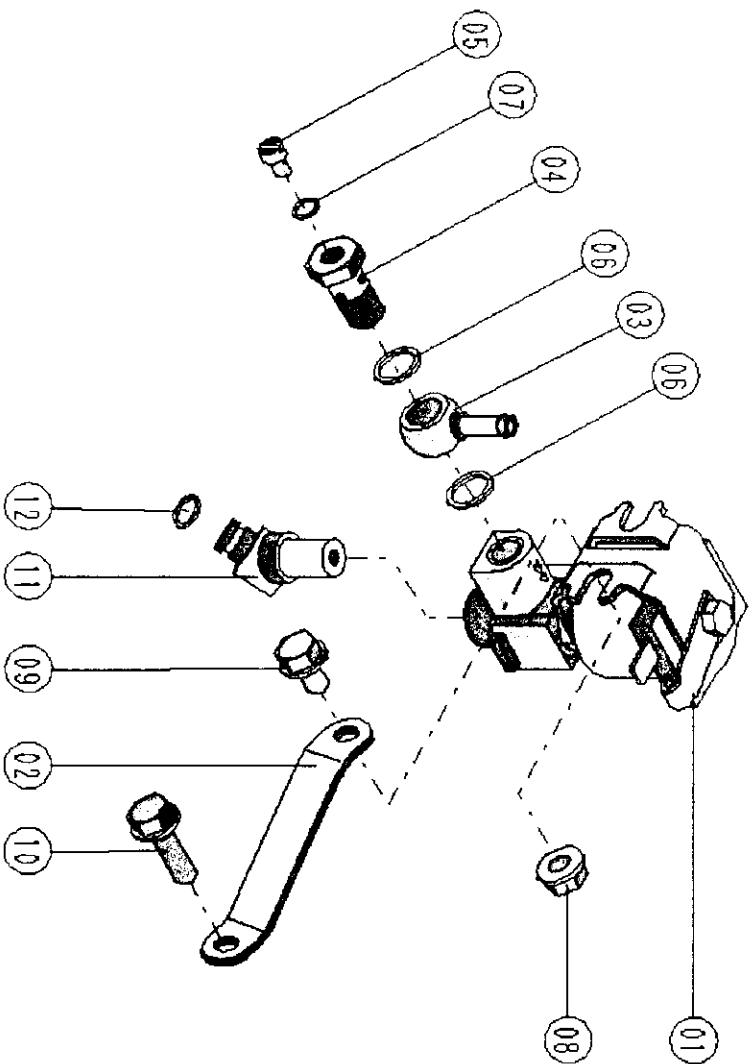

RIF	DESCRIZIONE	CODICE	Q.T.A x mot.
1	Elettrovalvola	114299-76900	1
2	Stafa	114299-76910	1
3	Raccordo	23387-071000	1
4	Vite raccordo	114299-59920	1
5	Vite spurgo	114299-59930	1
6	Rondella rame M10	114299-83010	2
7	Rondella rame M6	114299-83000	1
8	Dado M6	26366-060002	1
9	Vite 6x12	26106-060122	1
10	Vite 6x16	26106-060162	1
11	Introduttore	114299-59900	1
12	O.R. introduttore	114250-51190	1