



Titolo tavola
CYLINDER BLOCK
N. Rif. Codice Ricambio


Descrizione

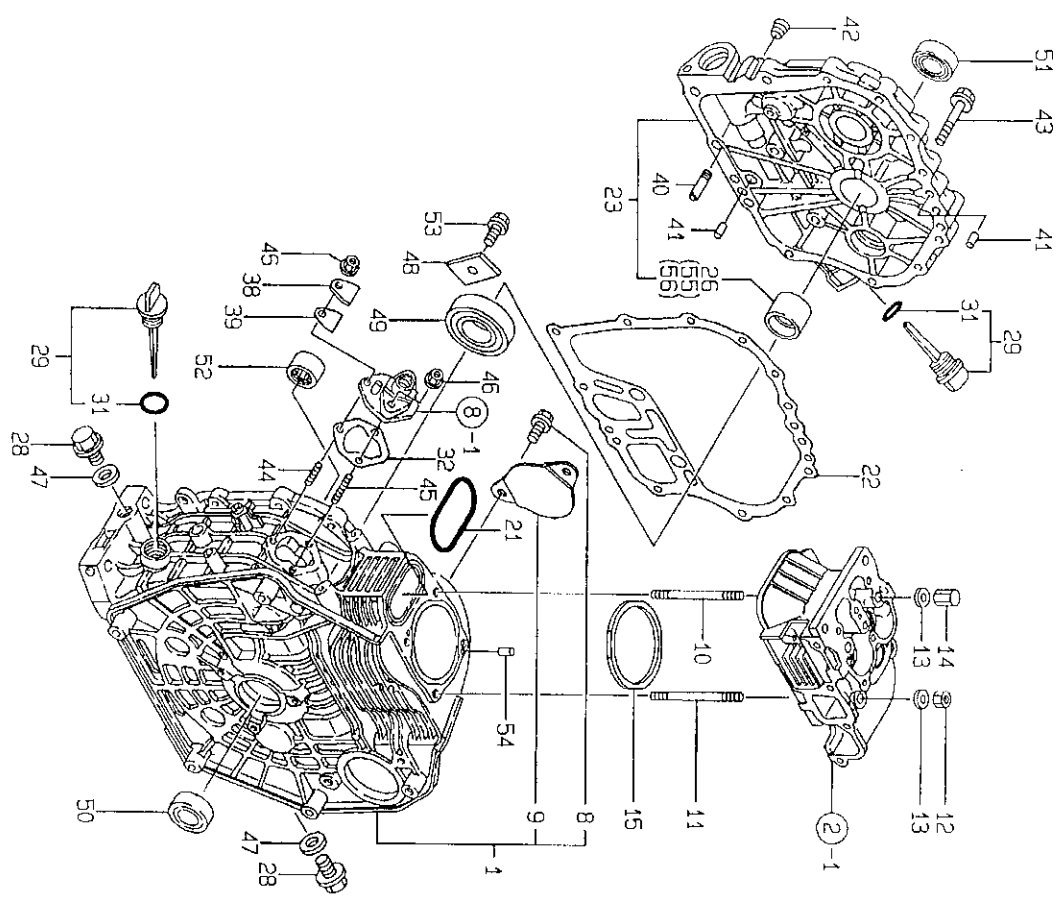

N. Rif.	Descrizione	Titolo tavola	Descrizione
1	Block Assy, Cylinder	714871-01560	Block Assy, Cylinder
8	Cover, Starter	114350-01700	Cover, Starter
9	Bolt M10x 12 Plated	26105-100122	Bolt M10x 12 Plated
10	Stud, Cyl. Head	114350-01200	Stud, Cyl. Head
11	Stud, Cyl. Head	114350-01210	Stud, Cyl. Head
12	Stud, Cyl. Head	114350-01220	Stud, Cyl. Head
13	Nut 9	105225-01240	Nut 9
14	Washer	114350-01250	Washer
15	Nut 9	114871-01330	Nut 9
21	Gasket, Cyl. Head Comp	114350-01380	Gasket, Cyl. Head Comp
22	O-ring	114350-01412	O-ring
23	Gasket, Crank Case	114350-01453	Gasket, Crank Case
26	Cover, (d), Crank Case	114350-02100	Cover, (d), Crank Case
28	Bearing, Main	105425-01690	Bearing, Main
29	Plug M16	114699-01760	Plug M16
31	Cap. W/lub oil Gauge	114299-01950	Cap. W/lub oil Gauge
32	O-ring	114250-01800	O-ring
38	Shim Set	114250-01830	Shim Set
39	Cover, Inspec. window	114250-01841	Cover, Inspec. window
40	Gasket	114250-35150	Gasket
41	Pipe, L.o. Inlet	114270-01600	Pipe, L.o. Inlet
42	Parallel Pin 8x12	23876-010000	Parallel Pin 8x12
43	Plug P14/8, Screw	26105-080352	Plug P14/8, Screw
44	Bolt M 8x 35 Plated	26226-060182	Bolt M 8x 35 Plated
45	Bolt M 6x 18 Plated	26226-060222	Bolt M 6x 18 Plated
46	Stud M 6x 22 Plated	26366-060002	Stud M 6x 22 Plated
47	Nut M 6	22190-160002	Nut M 6
48	Seal Washer 16s	114299-02030	Seal Washer 16s
49	Retainer	114350-02113	Retainer
50	Ball Bearing	160110-02220	Ball Bearing
51	Seal, Oil	160110-02220	Seal, Oil
52	Seal, Oil	24162-152112	Seal, Oil
53	Needle Bearing	26106-080122	Needle Bearing
54	Pin 4x8, Straight	22312-040080	Pin 4x8, Straight
55	Main Bearing Us=0.25	114350-02200	Main Bearing Us=0.25
56	Main Bearing Us=0.50	114350-02210	Main Bearing Us=0.50

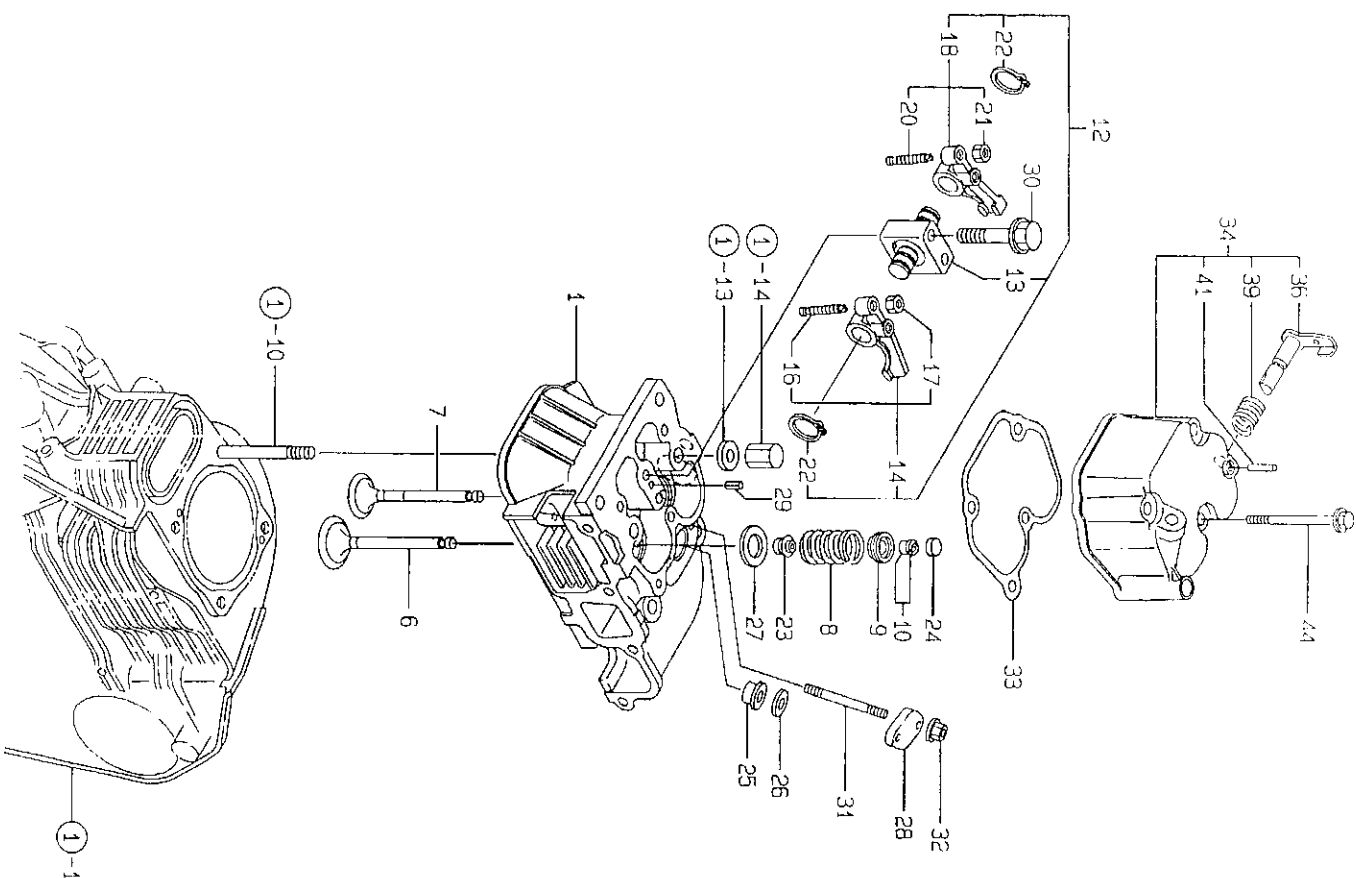

N. Rif.	Codice Ricambio	Descrizione
1	114871-11020	Cylinder Head
6	114871-11100	Valve, Suction
7	114871-11110	Valve, Exhaust
8	114350-11120	Spring Valve
9	101158-11180	Retainer, Spring
10	27310-060001	Cotter Assy
12	114771-11250	Support Cam, Arm
13	114771-11260	Support, Rocker Arm
14	114771-11650	Arm Assy, Intake
16	114250-11240	Screw, Valve Adjust
17	26856-060002	Lock Nut 6
18	114771-11660	Arm Assy, Exhaust
20	114250-11240	Screw, Valve Adjust
21	26856-060002	Lock Nut 6
22	22242-000120	Circclip 12
23	114350-11340	Seal, Valve Stem
24	105010-11490	Cap, Valve
25	114771-11461	Gasket, Nozzle
26	114771-11470	Spacer, Nozzle
27	114250-11600	Washer
28	114250-11901	Retainer
29	22351-040008	Spring Pin 4x 8
30	26106-060452	Bolt M 6x 45 Plated Stud
31	26226-060602	Nut M 6
32	26366-060002	Gasket, Bonnet
33	114771-11310	Bonnet Assy, Head
34	114771-11950	Shaft Assy, Decomp.
36	114250-03591	Spring
39	114250-03640	Parallel Pin 3x16
41	22312-030160	Bolt M 6x 55 Plated
44	26106-060552	

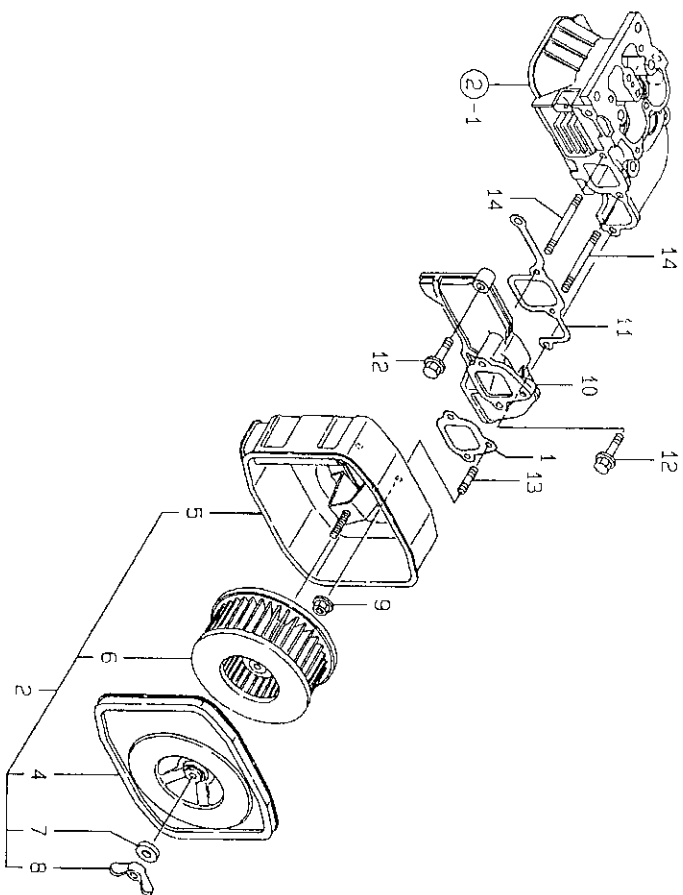


N. Rif.	Codice Ricambio	Descrizione
1	114250-12211	Gasket, Air Cleaner
2	714250-12560	Cleaner Assy, Air
4	114250-12520	Cover, Air Cleaner
5	114250-12530	Case, Air Cleaner
6	114250-12580	Element, Wet Air
7	114250-12560	Washer M 6, Seal
8	114250-12550	Washer M 6
9	114250-12300	U-nut
10	114399-12010	Pipe, Air Intake
11	114350-12202	Gasket, Air Intake
12	26106-060252	Bolt M 6x 25 Plated
13	26226-060142	Stud M 6x 14 Plated
14	26226-060552	Stud M6x 55 Plated


N tavola
FIG.4

Titolo tavola
MUFFLER
 N. Rif. Codice Ricambio


1	114250-13201
2	114870-13551
8	26106-060122
9	26216-080182
10	26366-080002
11	114288-13800
12	26554-060182
13	26367-060002

Descrizione
Gasket (non-ash)
Muffler Assy
Bolt M 6x 12 Plated
Stud M 8x 18 Plated
Nut M 8
Deflector Exh
• Screw M 6x 18
• U-nut M6

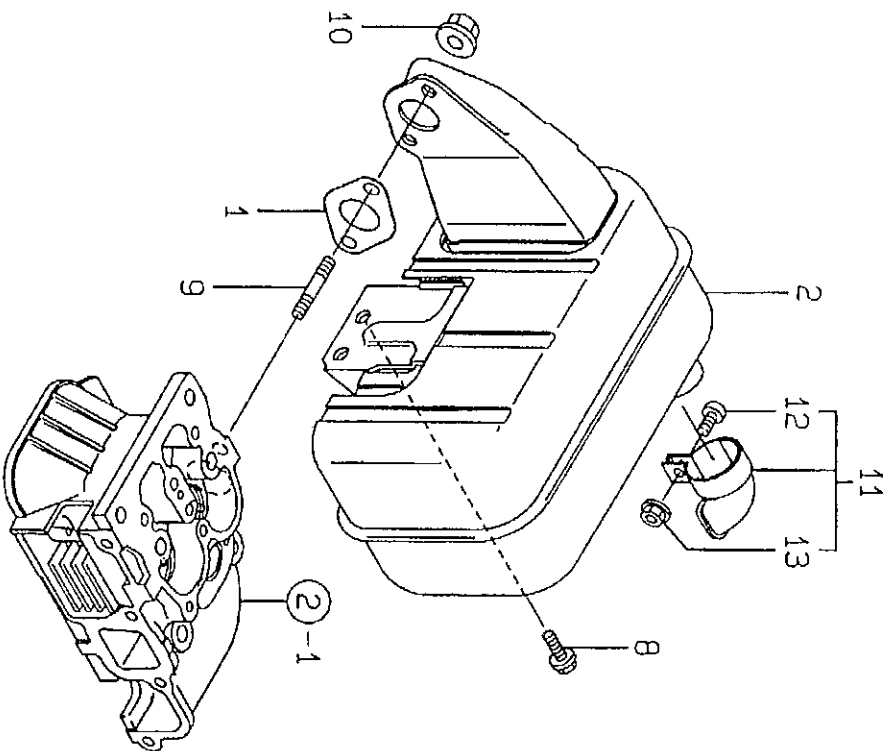

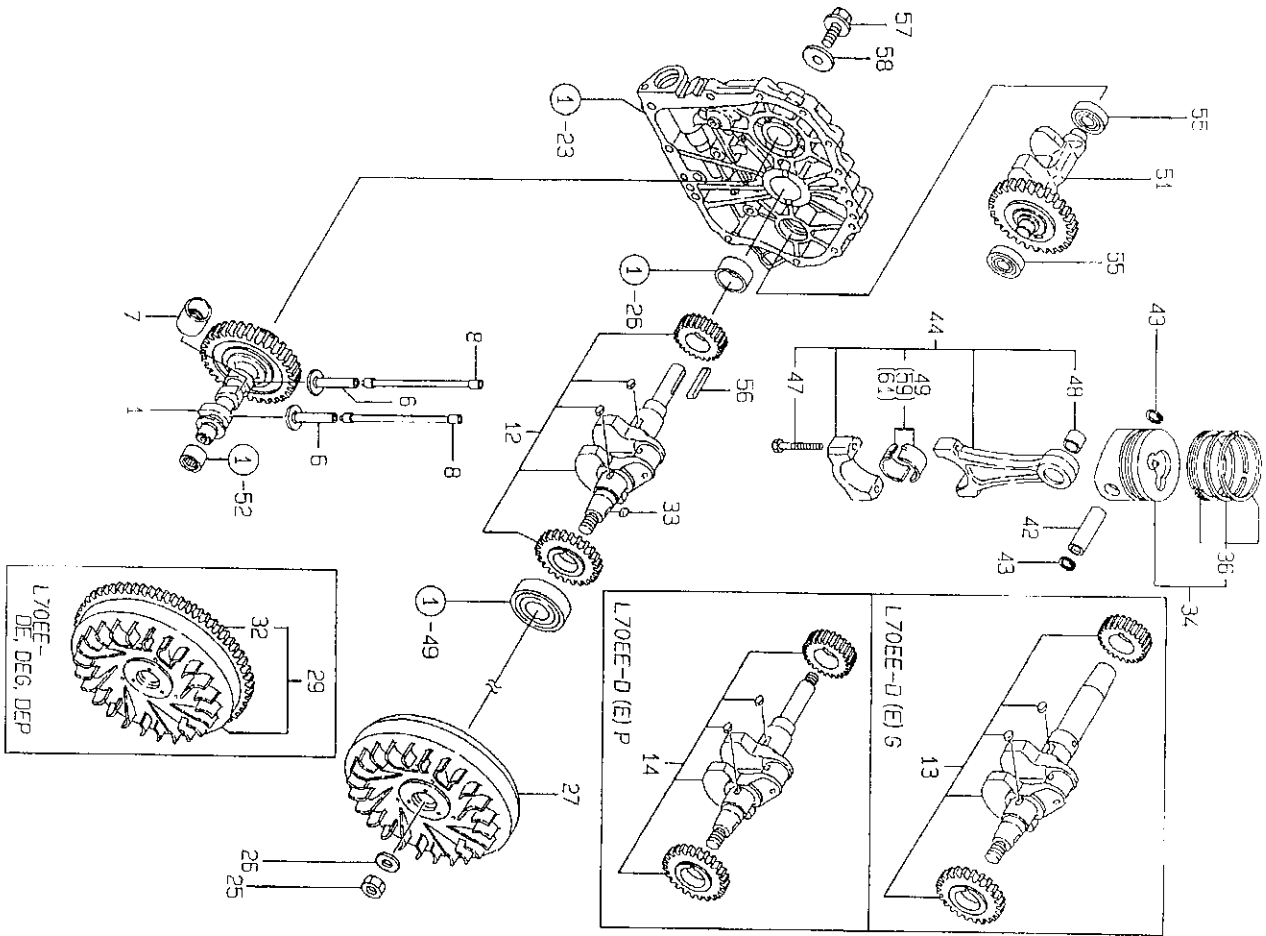


1	714880-14580	Camshaft (d) Assy
6	114250-14200	Tappet
7	114771-14260	Tappet, F.o.
8	114350-14450	Rod, Push
12	714876-21730	Crankshaft Assy
13	714879-21730	Crankshaft Assy
14	714878-21730	Crankshaft Assy
25	103854-01221	Nut M16
26	114250-21550	Washer, Flywheel
27	114880-21400	Flywheel (d)
29	114881-21590	Flywheel W/ring Gear
32	114362-21600	• Gear, Ring
33	22512-040120	Key 4x 12
34	714872-22720	Piston W/rings
36	714870-22500	• Ring Set, Piston
42	114399-22300	Piston Pin
43	22252-00210	Circlip 21
44	714380-23700	Rod Assy, Connecting
47	118200-23200	• Bolt, Rod
48	114380-23100	• Bush, Piston Pin
49	714380-23600	• Bearing, Crank Pin
51	714350-28520	Shaft Assy, Balancer
55	24101-062024	Ball Bearing
56	160842-21150	Key 6, 3x50
57	160842-21250	Bolt 7/16-20unf
58	160842-21260	Washer
59	714380-23610	Bearing, Pin (u:s=0,25
61	714380-23620	Bearing, Pin (u:s=0,50

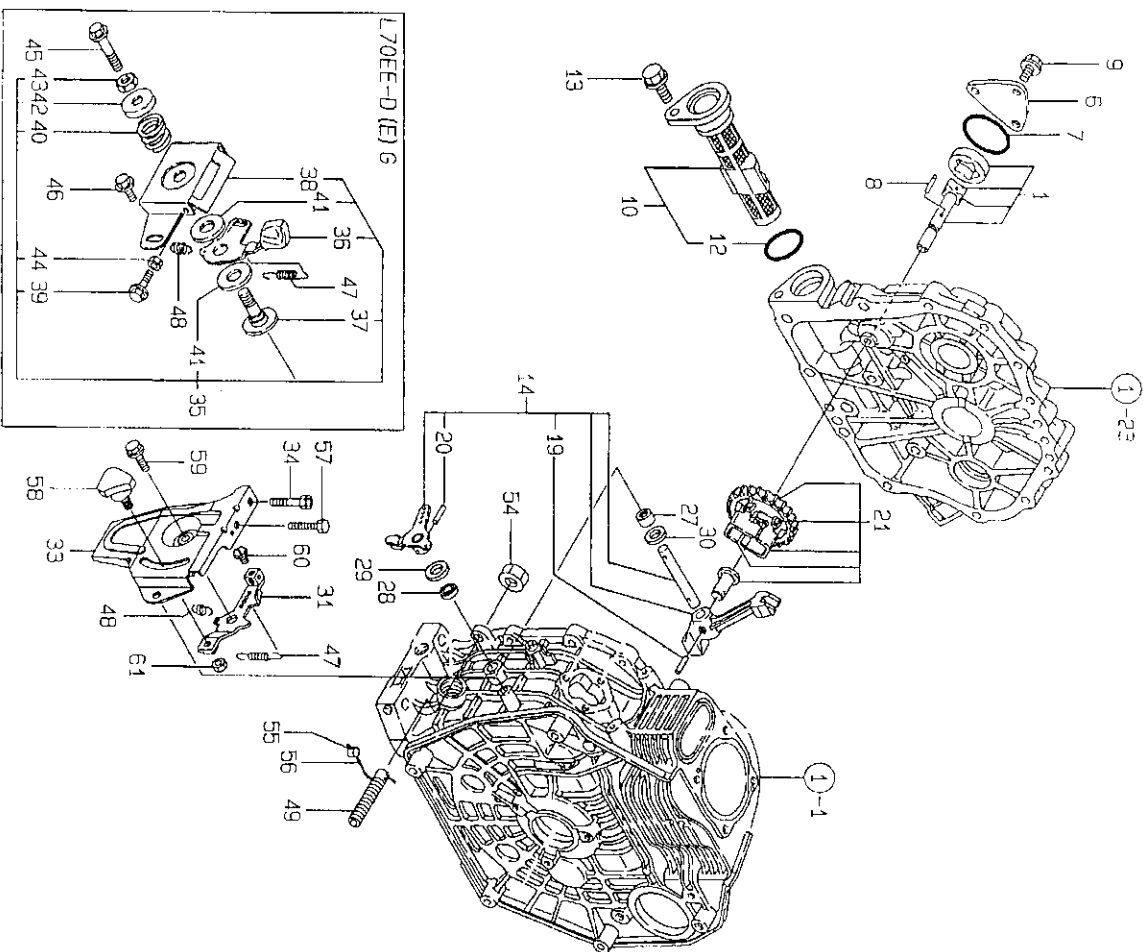


1	114250-32010
6	114250-32070
7	103338-32570
8	22312-030160
9	26476-060142
10	114250-35110
12	24341-000224
13	26106-060162
14	714350-61500
19	22322-030200
20	22322-030200
21	714770-61100
27	114770-61520
28	114770-61500
29	114770-61610
30	114770-61190
31	114250-66050
33	114299-66100
34	114250-66440
35	183250-66500
36	183250-66050
37	183250-66070
38	183250-66100
39	114250-66440
40	104200-66820
41	104200-66830
42	104200-66850
43	26696-100002
44	26757-060002
45	26106-060452
46	26476-060142
47	114870-66010
48	114250-66200
49	114871-66550
54	26696-100002
55	135210-61090
56	22451-060000
57	102100-67080
58	160725-78350
59	26106-060142
60	26117-040088
61	26347-060002

1	Pump Assy, Lub oil
6	Cover, Lub. Oil Pump
7	O-ring
8	Parallel Pin 3x16
9	Bolt M 6x 14, Tapping
10	Strainer, Lub Oil
12	O-ring 1a S-22.4
13	Bolt M 6x 16 Plated
14	Lever Assy, Governor
19	Taper Pin 3x20
20	Taper Pin 3x20
21	Governor Assy
27	Bearing, Needle
28	Seal, Oil
29	Washer, Thrust
30	Washer
31	Handle, Regulator
33	Stay, Handle
34	Bolt, Adjusting
35	Stay, Handle
36	Handle, Regulator
37	Bracket, Regulator
38	Shaft, Handle
39	Bolt, Adjusting
40	Spring
41	Plate, Friction
42	Washer (b)
43	Washer (b)
44	Nut M10
45	Nut 6
46	Bolt M 6x 4.5 Plated
47	Bolt M 6x 14, Tapping
48	Spring, Regulator
49	Spring, Return
54	Torque Spring Assy
55	Nut M10
56	Lead
57	Wire 0.6
58	Bolt, Adjusting
59	Knob (w/m6x15)
60	Bolt M 6x 14 Plated
61	Bolt 4 * 8
	U-nut 6

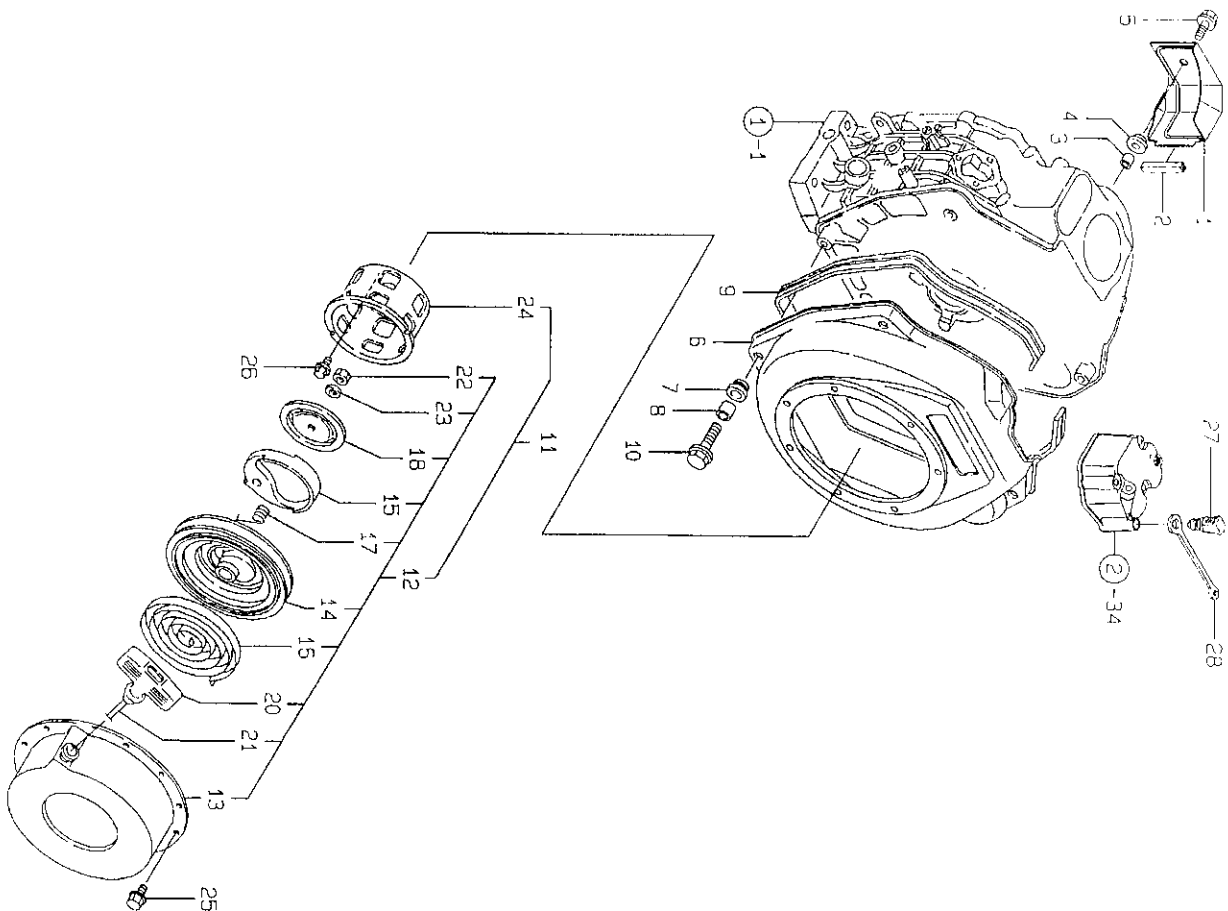


1	114870-45201
2	114350-45320
3	114350-45340
4	183720-55210
5	26106-060202
6	114360-45101
7	114250-45301
8	114250-45310
9	114250-45330
10	114370-45351
11	114880-76050
12	114880-76250
13	114880-76510
14	160810-76520
15	160840-76530
16	160810-76540
17	160840-76560
18	160810-76580
20	160810-76620
21	160810-76630
22	181130-76680
23	181130-76700
24	114350-76590
25	26106-060082
26	26106-080122
27	114250-76600
28	114250-76610

N. Rif.	Codice Ricambio	Descrizione
1	114870-45201	Cover
2	114350-45320	Rubber, Seal
3	114350-45340	Collar
4	183720-55210	Grommet
5	26106-060202	Bolt M 6x 20 Plated
6	114360-45101	Case, Fan (silver) (17)
7	114250-45301	Rubber, Cushion
8	114250-45310	Collar
9	114250-45330	Seal, Fan Case
10	114370-45351	Bolt, Fan Case
11	114880-76050	Starter Assy, Recoil
12	114880-76250	Recoil Assy
13	114880-76510	Case, Starter
14	160810-76520	Reel, Recoil
15	160840-76530	Ratchet
16	160810-76540	Spring, Spiral
17	160840-76560	Spring, Friction
18	160810-76580	Plate, Friction
20	160810-76620	Knob, Starter
21	160810-76630	Rope, Starter
22	181130-76680	Nut
23	181130-76700	Washer
24	114350-76590	Pulley, Starter
25	26106-060082	Bolt M 6x 8 Plated
26	26106-080122	Bolt M 6x 12 Plated
27	114250-76600	Plunger
28	114250-76610	Holder, Plunger

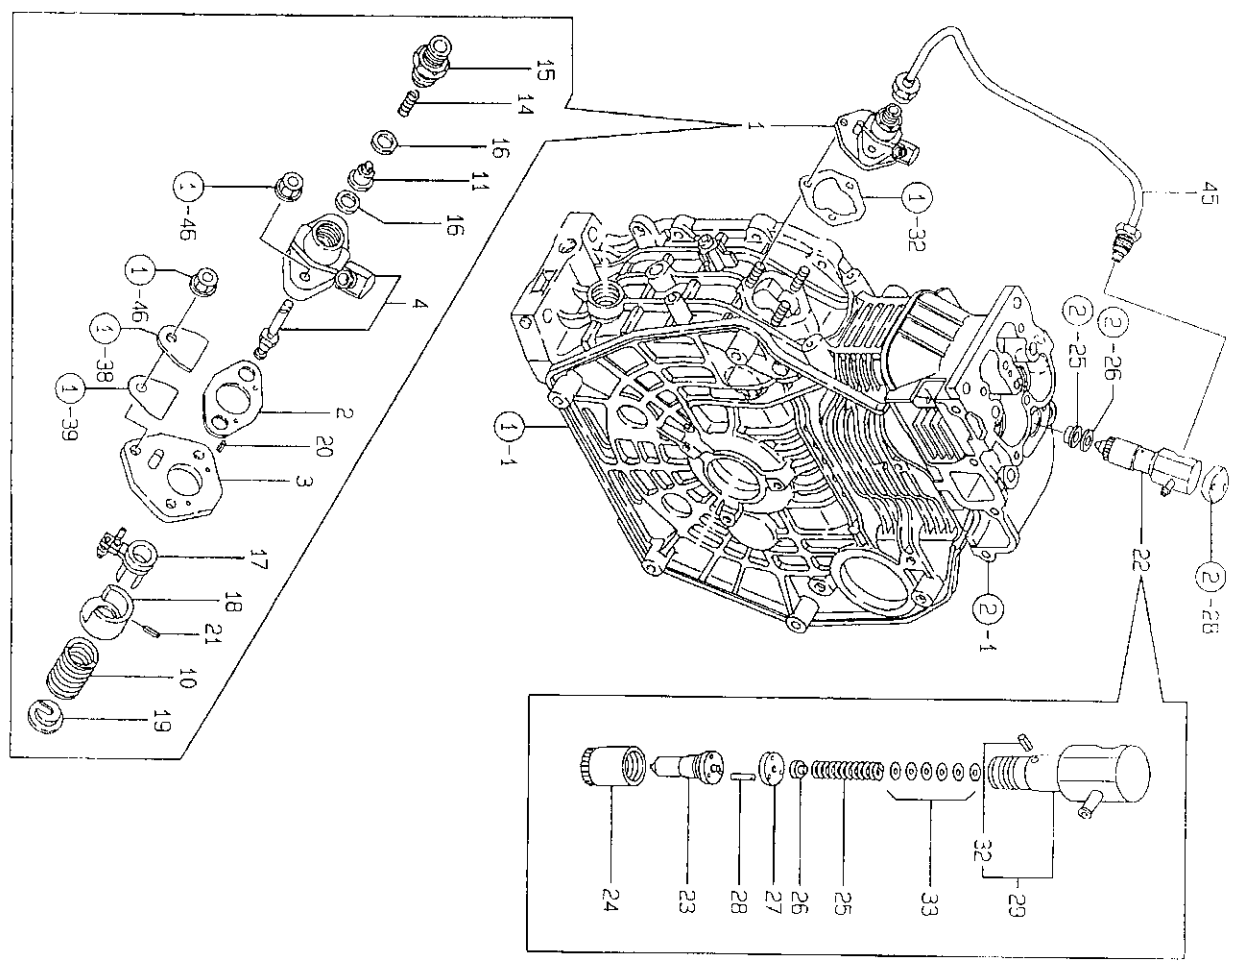

N. Rif.	Codice Ricambio
1	714650-51100
2	105546-51020
3	114250-51080
4	114650-51100
10	114250-51160
11	114650-51300
14	105546-51330
15	114250-51340
16	124550-51350
17	114250-51600
18	114250-51640
19	114250-51650
20	22351-020006
21	22351-030008
22	714871-53100
23	114871-53000
24	119593-53080
25	114250-53120
26	114775-53140
27	119593-53130
28	114775-53210
29	114775-53100
32	114775-53330
33	114250-53400
45	114871-59802

Descrizione
Pump Assy, F. Inject
• Gasket
• Plate
• Body, F.I. Pump
• Spring
• Valve Assy, Delivery
• Spring, Deliv. Valve
• Holder, F.I.p.delive
• Gasket, Delivery
• Lever Assy, Control
• Seat (a), Spring
• Seat (b), Spring
• Spring Pin 2x 6
• Spring Pin 3x 8
• Valve Assy, F. Inject
• Nozzle Assy
• Nut, Nozzle Case
• Spring, Nozzle
• Retainer, Spring
• Spacer, Valve Stop
• Pin
• Holder Assy
• Shim Pack
• Pin
• Fuel Injection Pipe

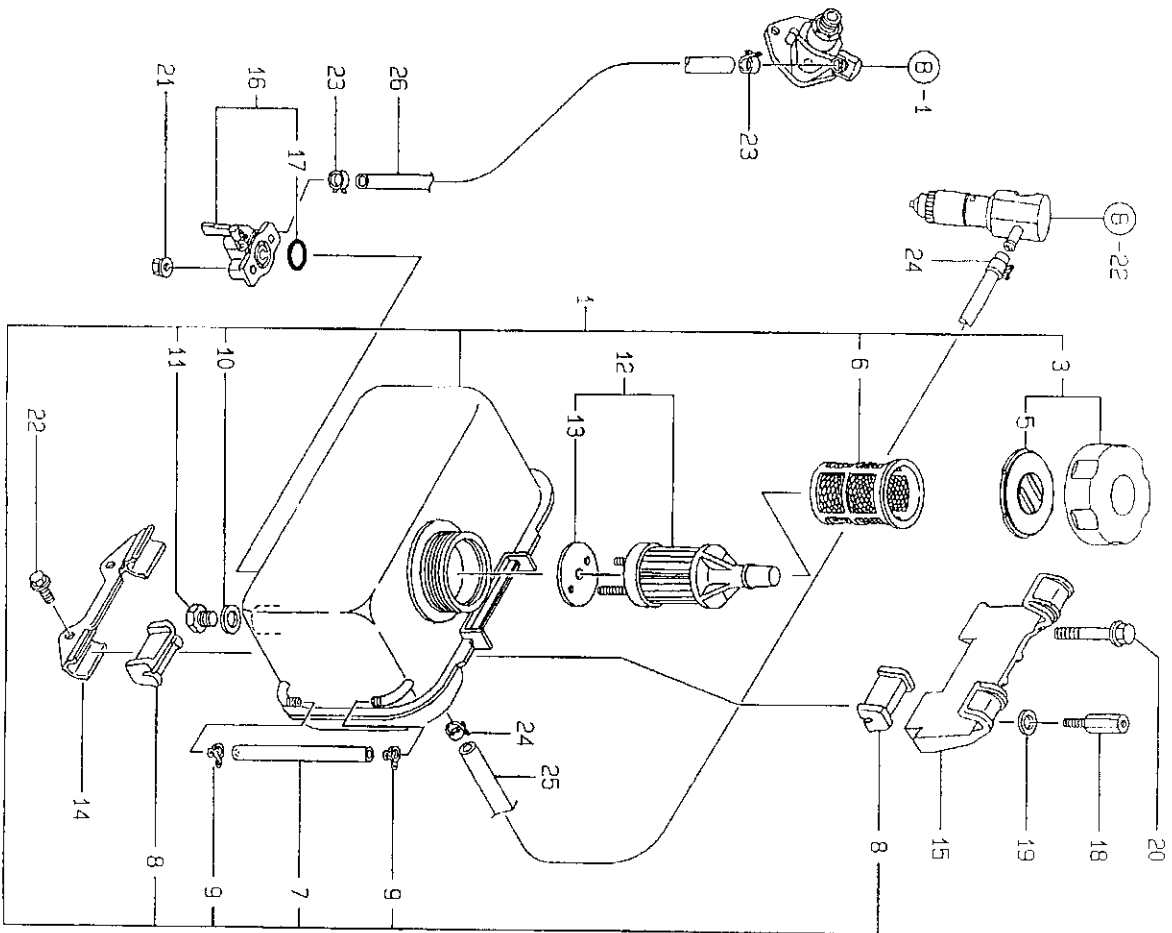


1	714350-55711
3	114288-55040
5	114288-55080
6	114250-55100
7	114350-55150
8	114250-55201
9	103854-55220
10	23414-080000
11	105300-55080
12	114250-55121
13	114250-55130
14	114299-55210
15	114399-55230
16	114250-55300
17	24341-000150
18	114650-55810
19	22117-080000
20	26106-080452
21	26366-080002
22	26476-060142
23	106990-44660
24	124722-59050
25	114250-59060
26	114268-59061

1	Tank, Fuel (red) (50)
3	• Cap Assy, Tank
5	• Valve
6	• Filter, Fuel
7	• Pipe, Gauge
8	• Damper, Fuel Tank
9	• Clamp
10	• Gasket 8, Round
11	• Plug, Drain
12	• Filter, Fuel Oil
13	• Gasket
14	• Stay
15	• Stay (b)
16	• Cock Assy, Fuel
17	• O-ring 1a S-15.0
18	• Bolt, Lifting
19	• Washer 8
20	• Bolt M 8x 45 Plated
21	• Nut M 6
22	• Bolt M 6x 14, Tapping
23	• Clip, Hose
24	• Clamp 9
25	• Pipe, Fuel Return
26	• Pipe, Fuel Oil


Descrizione

1	114382-77011	Starter (s114-414a)
2	114381-77110	• Armature
3	X211481-1000	• Washer Kit, Thrust
4	X2114715500	• Stopper Set, Pinion
5	114381-77130	• Coil Assy, Field
6	114381-77140	• Cover, Rear
7	114371-77160	• Holder Assy, Brush
8	114371-79040	• Brush (-)
9	114371-79050	• Brush (+)
10	114371-79060	• Spring, Brush
11	X2114455080	• Pinion Assy
12	114381-77150	• Housing Assy, Gear
13	114371-77170	• Cover Kit, Dust
14	X21144560130	• Lever Kit, Shift
15	X2114275010	• Switch Assy, Magnet
16	X2114680050	• Bolt, Through
17	114371-79070	• Bolt M 6x 37
18	X2114274200	• Cover, Terminal
19	26106-100302	• Bolt M10x 30 Plated
20	114351-78251	• Dynamo Assy
21	114351-78751	• Stator Assy
22	114351-78761	• Wheel, Dynamo
23	160710-78710	• Clamp, Cord
24	26106-060122	• Bolt M 6x 12 Plated
25	28476-060202	• Bolt M 6x 20, Tapping
26	26577-060142	• Screw M 6x 14
27	26716-080002	• Nut M 8
28	160970-77350	• Rectifier
29	26106-060122	• Bolt M 6x 12 Plated
30	183350-77400	• Wire, Lead

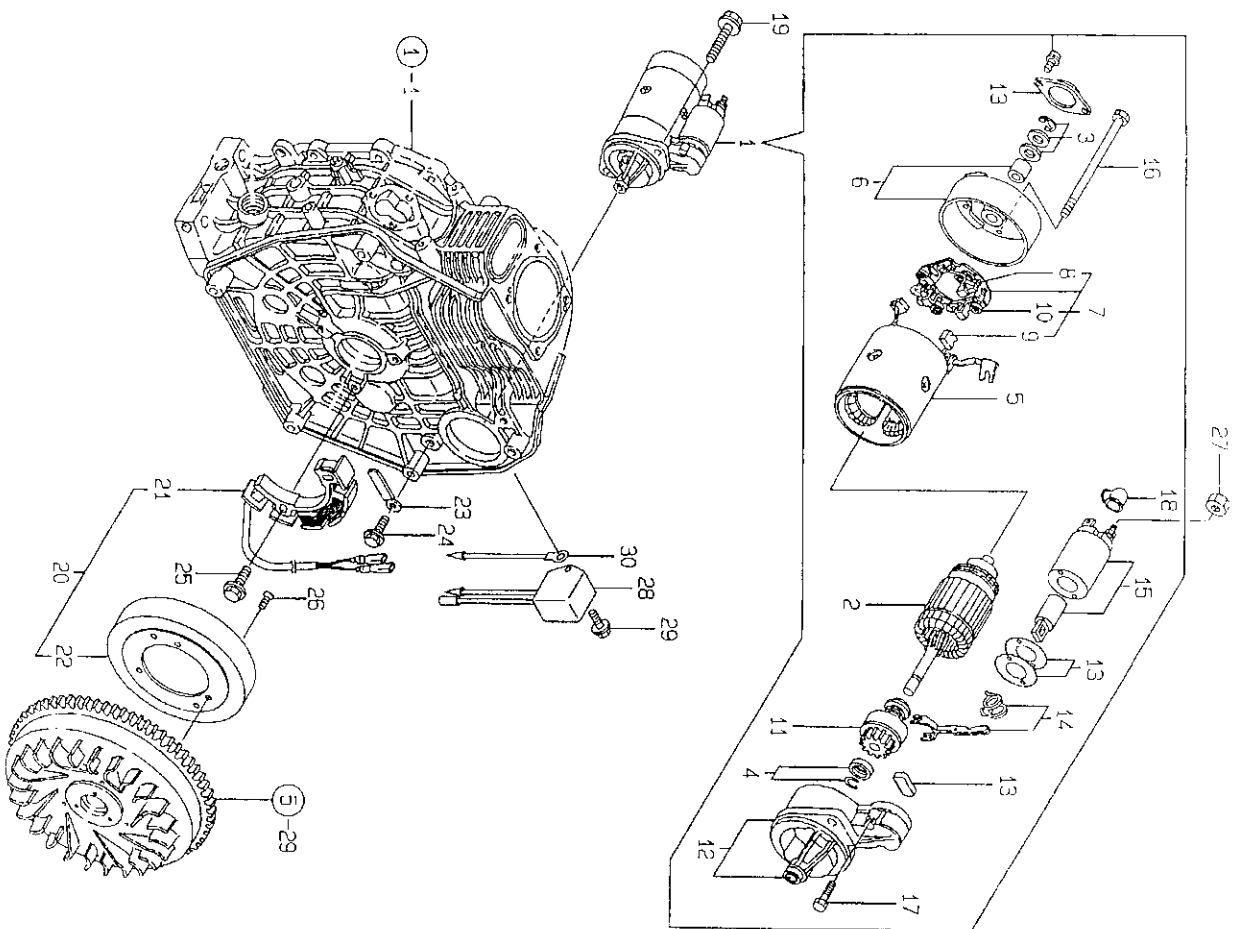


N. Rif. Codice Ricambio

Descrizione

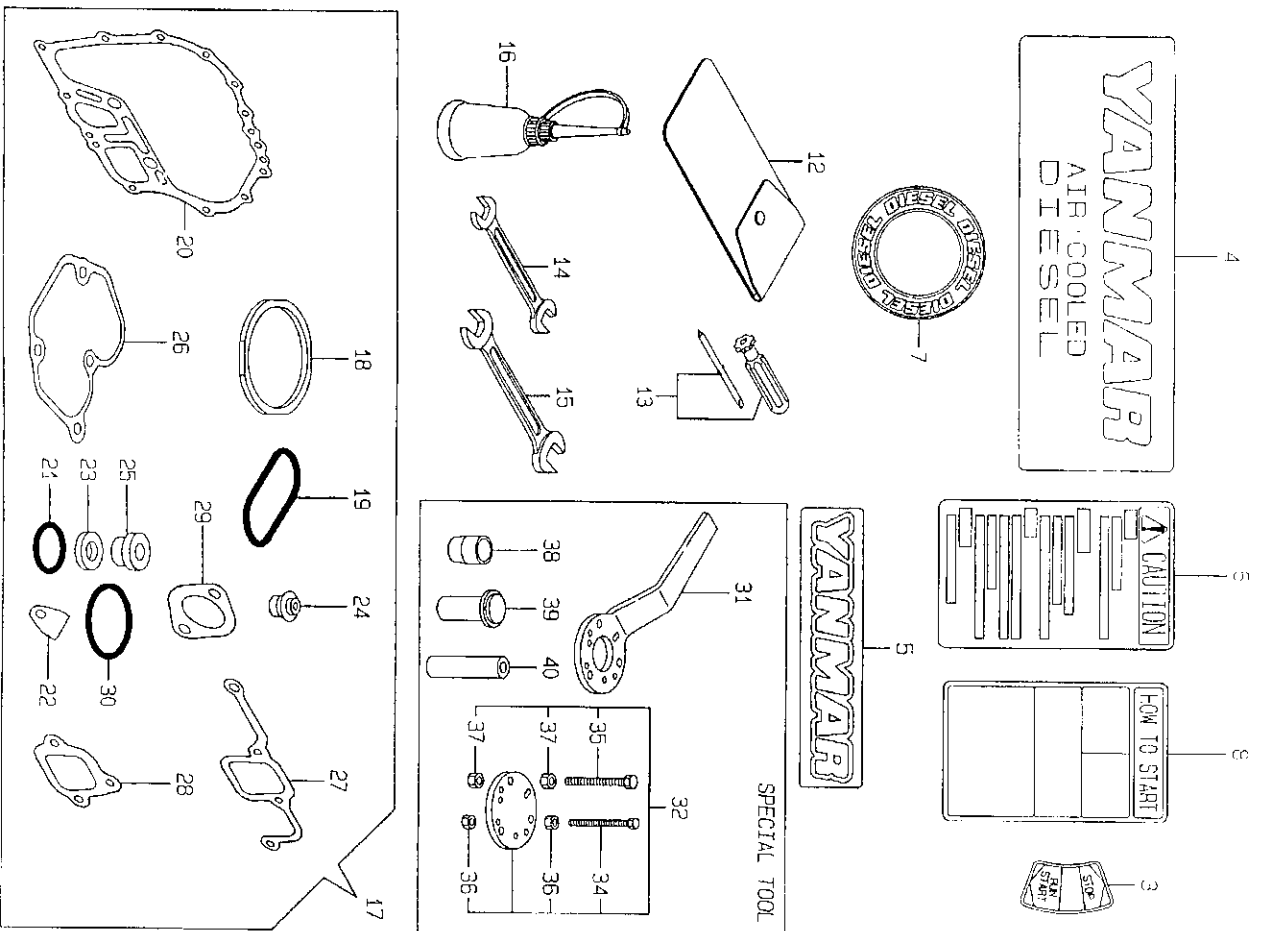

3	183250-07230	Label Operation
4	114250-07090	Label Air Cooled
5	114250-07111	Label Yanmar
6	114268-07240	Label Caution
7	114261-07350	Label
8	114268-07350	Label How To Start
12	114250-92600	Bag Tool
13	160330-92730	Screwdriver
14	28110-100120	Wrench 10x12
15	28110-140170	Wrench 14x17
16	28210-000150	Feeder Oil
17	714871-92600	Gasket Set
18	114871-01330	Gasket, Cyl. Head Cmp
19	114350-01380	O-ring
20	114350-01412	Gasket, Crank Case
21	114299-01950	O-ring
22	114250-01841	Gasket
23	22190-160002	Seal Washer 16s
24	114350-11340	Seal Valve Stem
25	114771-11461	Gasket Nozzle
26	114771-11310	Gasket Bonnet
27	114350-12202	Gasket Air Intake
28	114250-12211	Gasket Air Cleaner
29	114250-13201	Gasket (non-ash)
30	103338-32570	O-ring
31	114250-92101	F.w. Locking Handle
32	114250-92130	Remover Flywheel
34	26116-060454	Bolt M 6x 45 Plated
35	26116-080454	Bolt M 8x 45 Plated
36	26716-060002	Nut M 6
37	26716-080002	Nut M 8
38	114368-92300	Guide Oil Seal
39	114350-92311	Installing Tool
40	114350-92350	Installing Tool

Elettrovalvola alla pompa

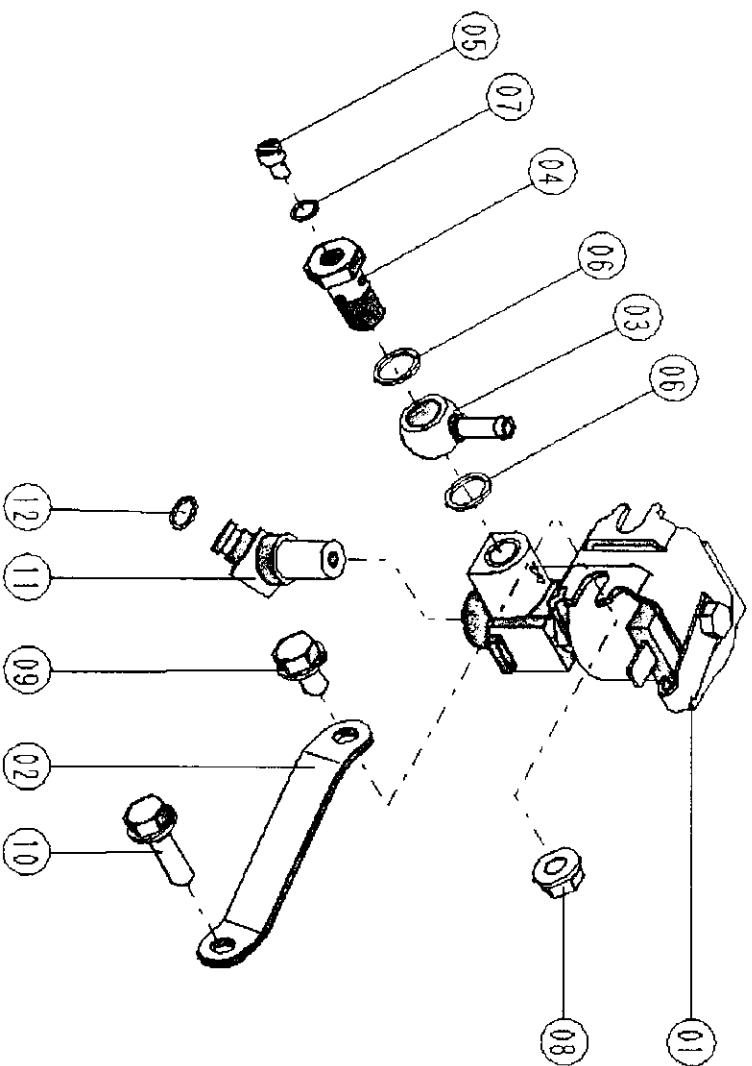

RIF	DESCRIZIONE	CODICE	Q.T.A x mot.
1	Elettrovalvola	114299-76900	1
2	Stafa	114299-76910	1
3	Raccordo	23387-071000	1
4	Vite raccordo	114299-59920	1
5	Vite spurgo	114299-59930	1
6	Rondella rame M10	114299-83010	2
7	Rondella rame M6	114299-83000	1
8	Dado M6	26366-060002	1
9	Vite 6x12	26106-060122	1
10	Vite 6x16	26106-060162	1
11	Introduttore	114299-59900	1
12	O.R. introduttore	114250-51190	1